




1. Make sure surface is clean and dry. Snap off tamper-proof tab and remove overcap.

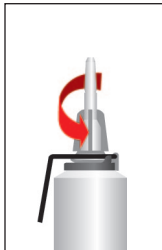

2. To open valve, turn nozzle counterclockwise 1/4 turn and raise lever. To dispense, press the lever. To close, turn nozzle clockwise. Replace overcap.

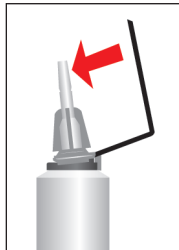

3. If sealant has dried in the nozzle, make sure nozzle is closed and swing the lever over the nozzle. Pull nozzle forward to remove and clean the tip with a paper clip or compressed air line.

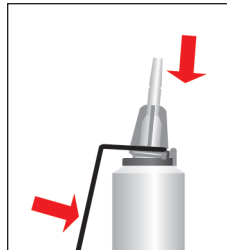

4. Replace nozzle back over valve with the thicker of the two tabs at the base of the nozzle facing the lever hinge. Push the nozzle backwards towards the hinge. Swing the lever back over the nozzle, push down on the lever to firmly "click" the nozzle back into position.